

6-3. Initialization

Items to initialize

After reconnecting or performing maintenance on the 12 volt battery, the hybrid system may not start. (→P. 372) Also, the following items must be initialized for normal system operation.

| Item | When to initialize | Reference |
|------------------------------|---|-----------|
| Power window | <ul style="list-style-type: none">• After reconnecting or changing the battery• After changing a fuse | P. 53 |
| Moon roof | | P. 56 |
| Variable gear ratio steering | | P. 151 |
| Intuitive parking assist | | P. 151 |
| Engine oil maintenance data | <ul style="list-style-type: none">• After changing engine oil | P. 366 |
| Tire pressure warning system | <ul style="list-style-type: none">• When rotating the tires on vehicles differing with front and rear tire inflation pressures.• When changing the tire inflation pressure by changing traveling speed or load weight, etc.• When changing the tire size. | P. 377 |

